


**LANGEN**

**G60N**

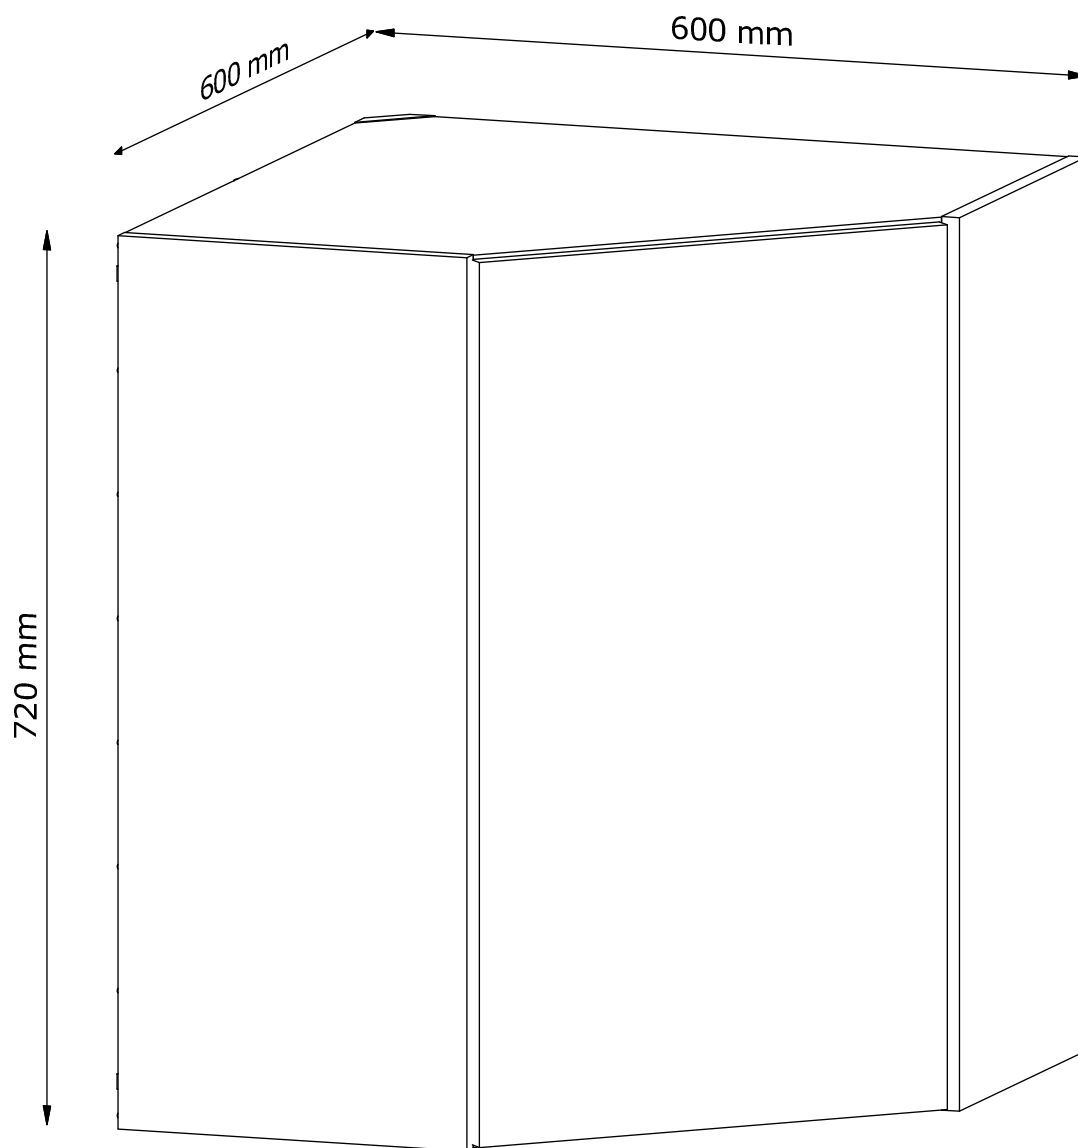

**PL:** INSTRUKCJA MONTAŻU

**EN:** ASSEMBLY MANUAL


**CZ:** PŘÍRUČKA PRO MONTÁŽ
















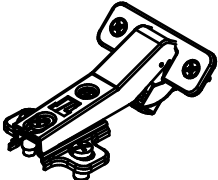
**SK:** PRÍRUČKA PRE MONTÁŽ


**DE:** MONTAGEANLEITUNG

**SR:** UPUTSTVO ZA INSTALACIJU



**NL:** MONTAGE-INSTRUCTIES

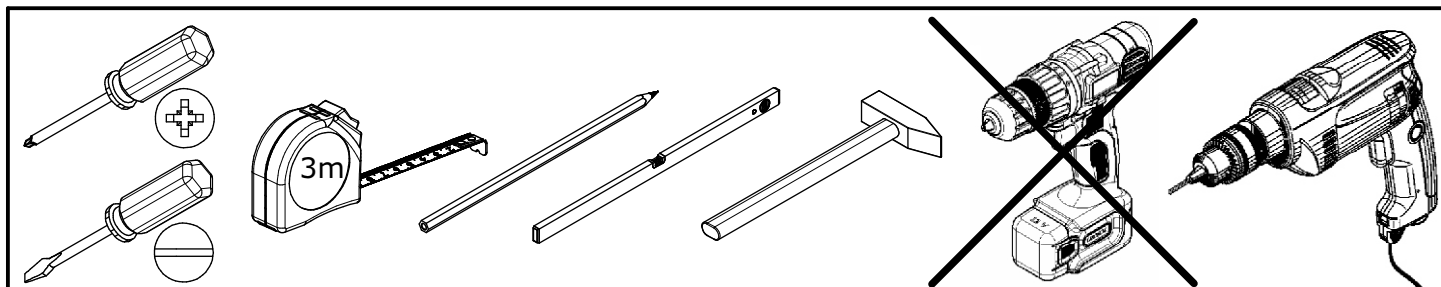
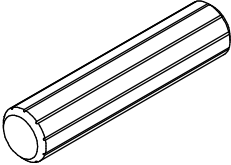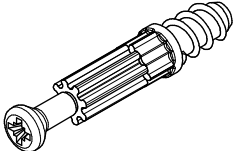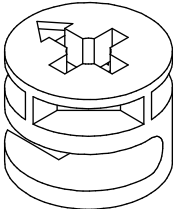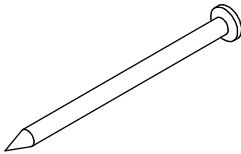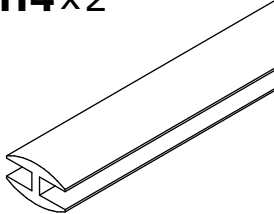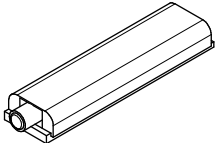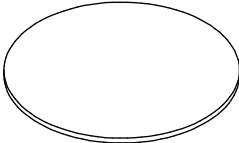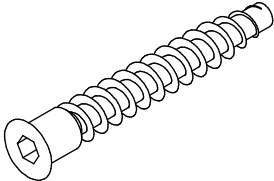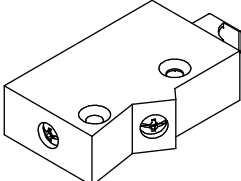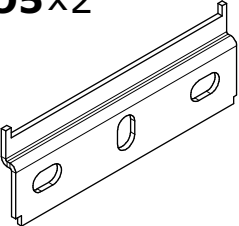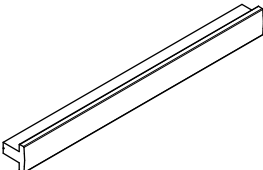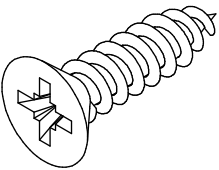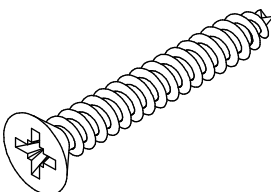
<b>A1 x12</b>  $\varnothing 8 \times 35 \text{ mm}$	<b>B1 x12</b>  $\varnothing 5 \times 38 \text{ mm}$	<b>C1 x12</b>  $\varnothing 15 \times 12 \text{ mm}$	<b>G1 x56</b>  26mm	<b>H4 x2</b>  $\varnothing 715 \text{ mm}$
<b>I20 x1</b>  83x21x11mm	<b>J10 x12</b>  $\varnothing 21 \text{ mm}$	<b>K1 x3</b>  $\varnothing 6,4 \times 50 \text{ mm}$	<b>N2 x1</b>  4mm HEX	<b>O1 x2</b>  70x39x18mm
<b>O5 x2</b>  76x32x6mm	<b>U18 x1</b>  200mm	<b>W2 x6</b>  $\varnothing 3,5 \times 16 \text{ mm}$	<b>W5 x6</b>  $\varnothing 4 \times 30 \text{ mm}$	<b>Y1 x2</b>  $\varnothing 8 \times 1,5 \text{ mm}$
<b>Z9 x2</b>  n 35mm, 45°				

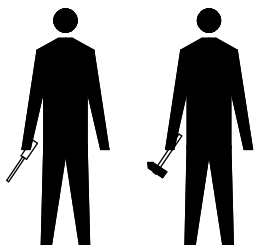


No.	L[mm]	W[mm]	H[mm]		BOX
061/062	410	713	15/18	1	2/2
115	720	295	15	2	1/2
332	585	585	15	3	1/2
405	720	70	15	1	1/2
516	716	283	2,5	2	1/2
517	716	283	2,5	1	1/2
518	716	283	2,5	1	1/2

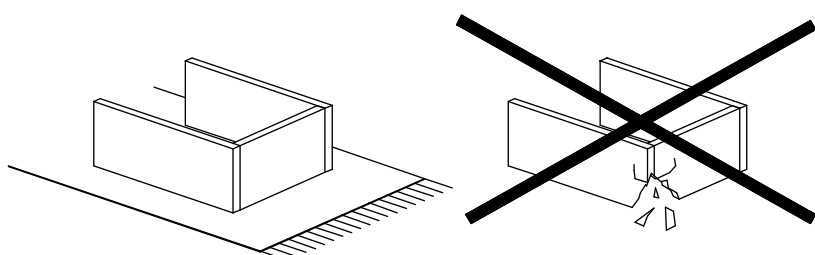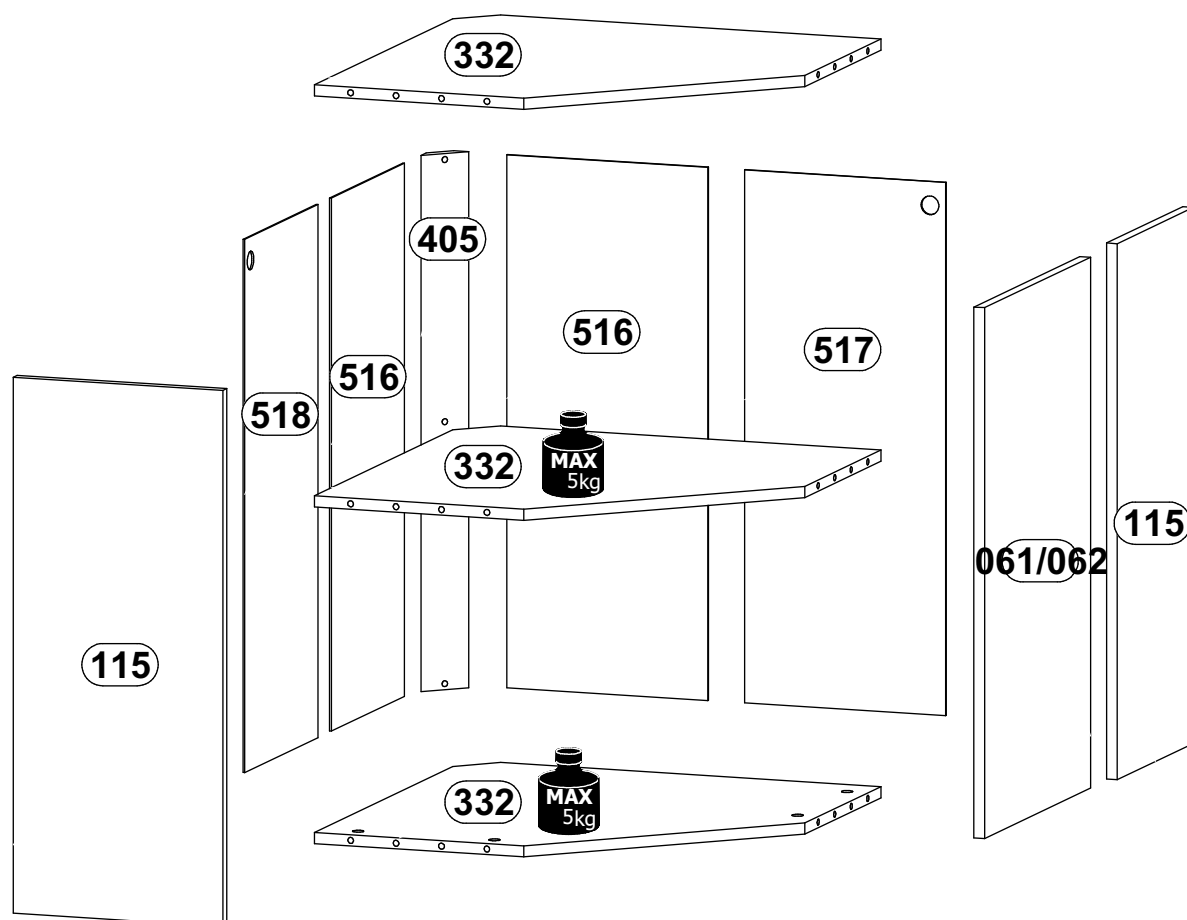


1

B1 x12

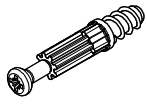


Ø5x38mm

O1 x2




70x39x18mm




W5 x4



Ø4x30mm




B1

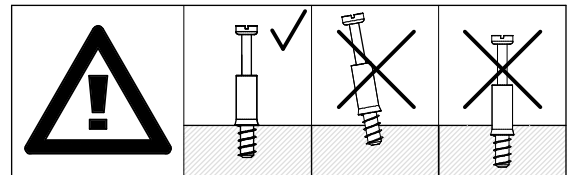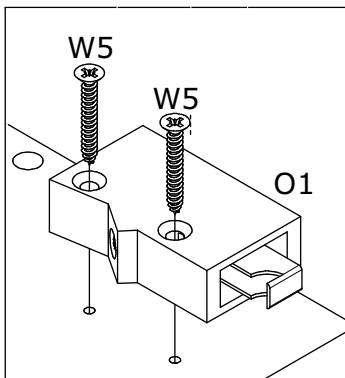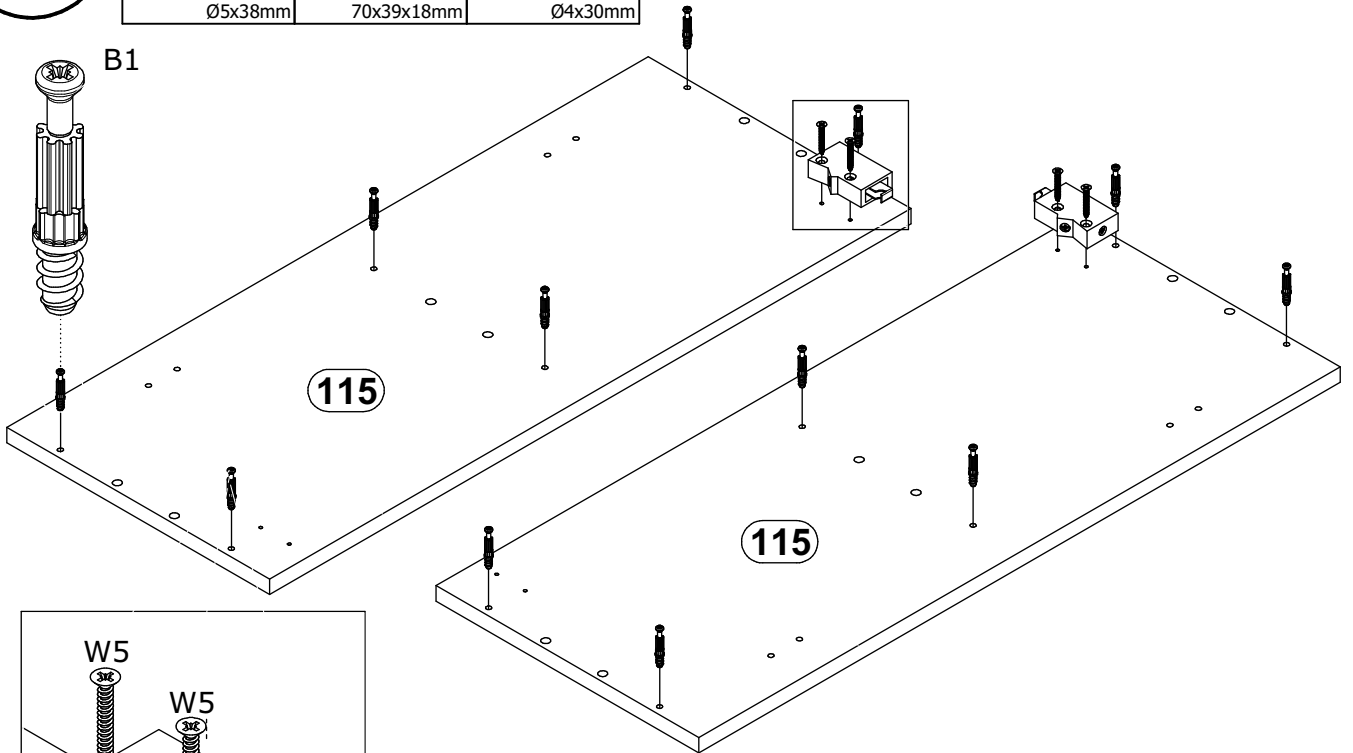

2

A1 x12





Ø8x35mm



C1 x12





Ø15x12mm

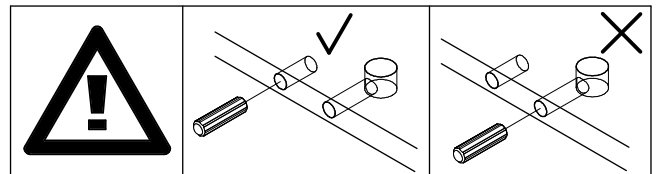

C1



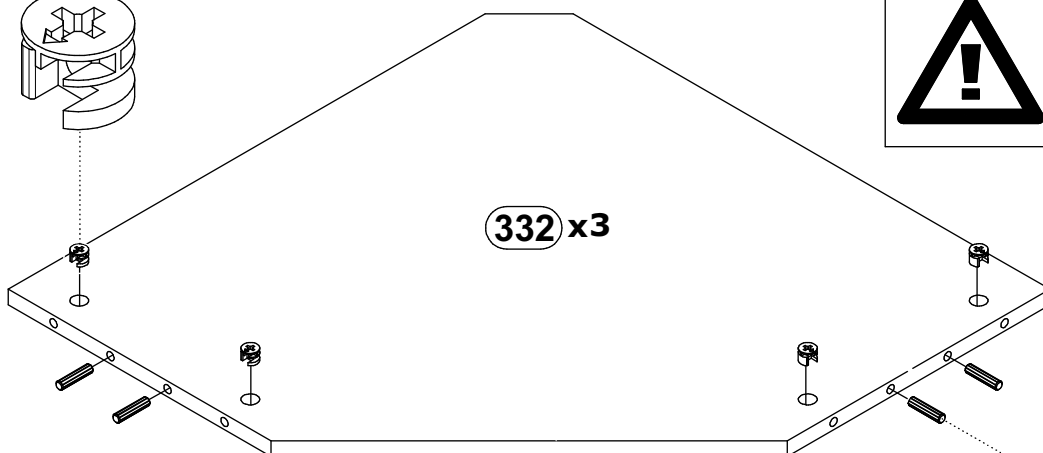
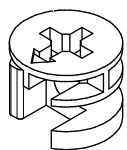


332 x3


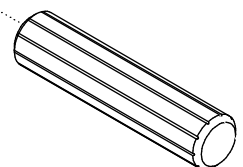
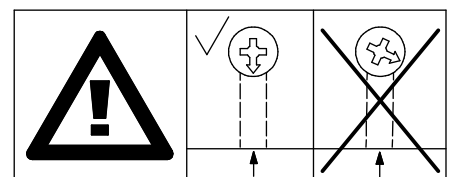


A1





3

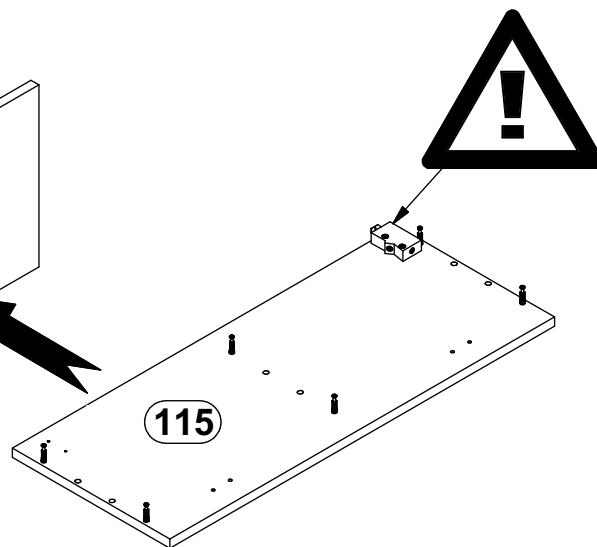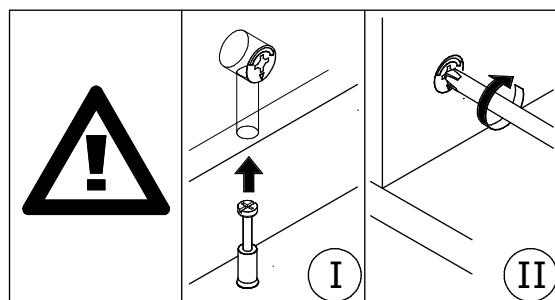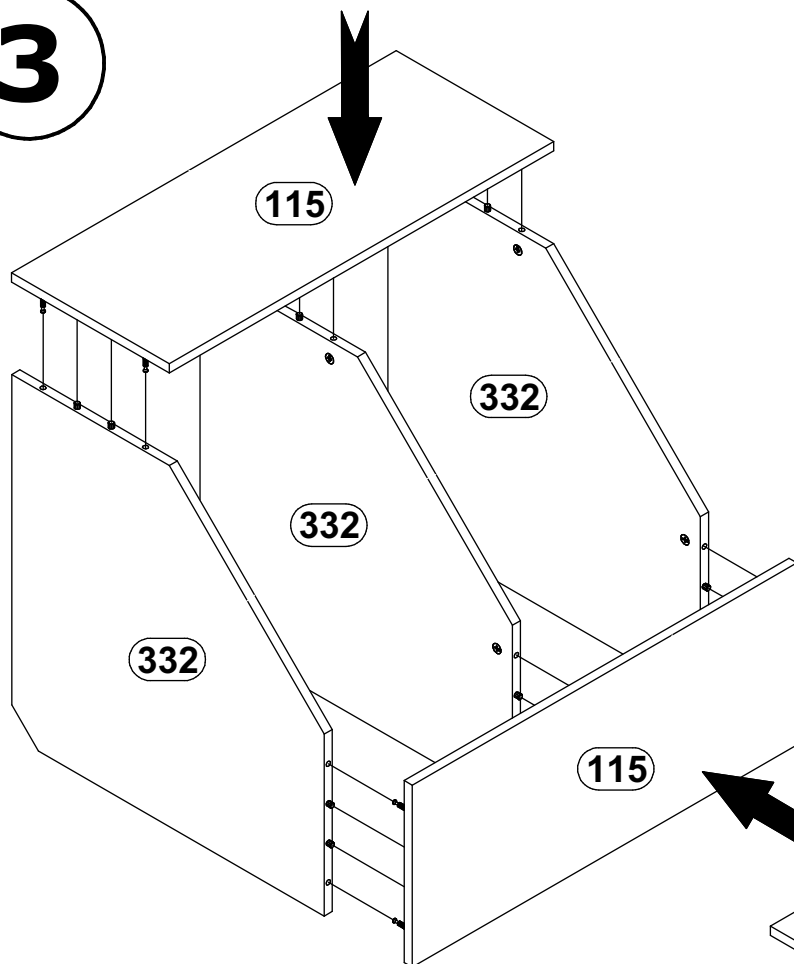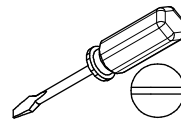

4


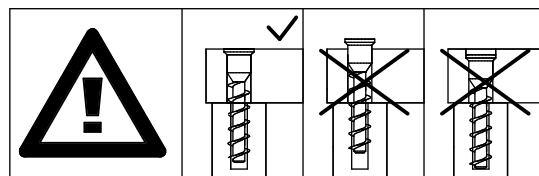
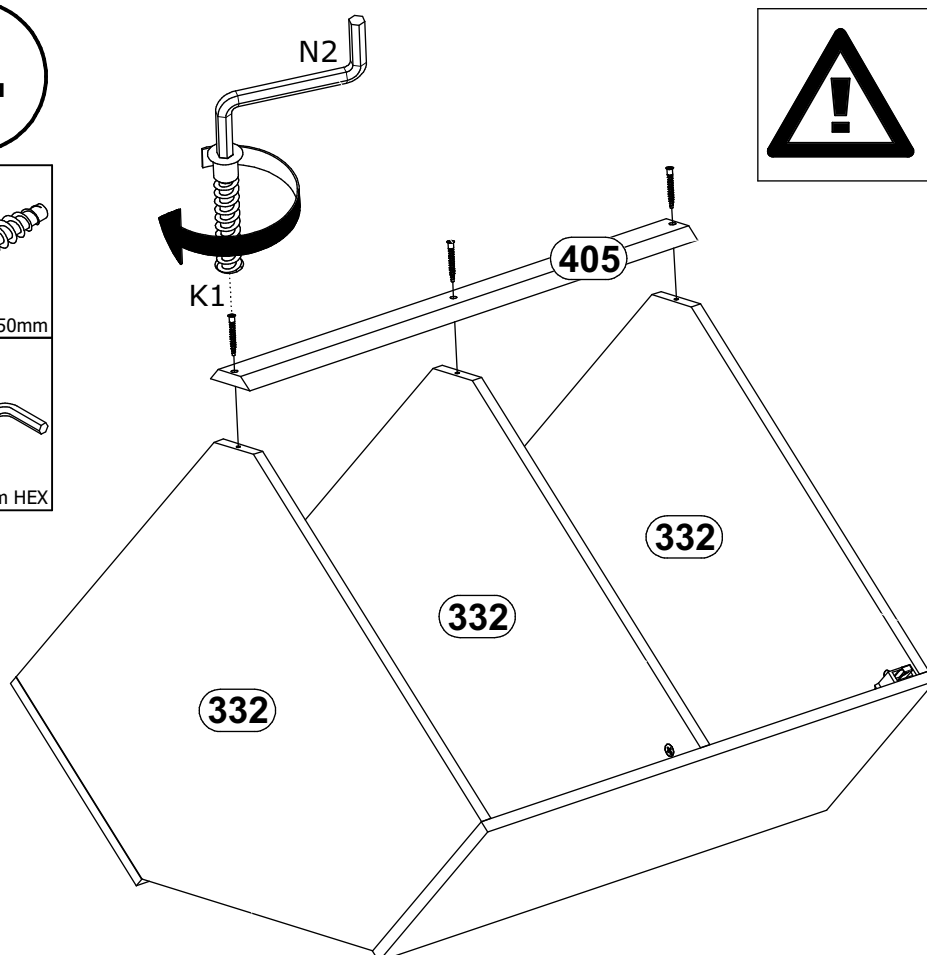
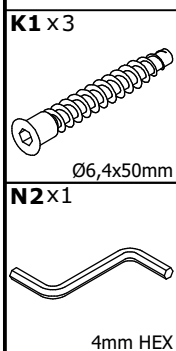


**5**


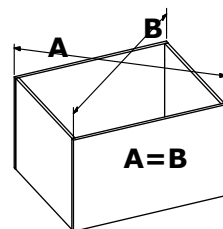
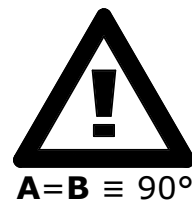
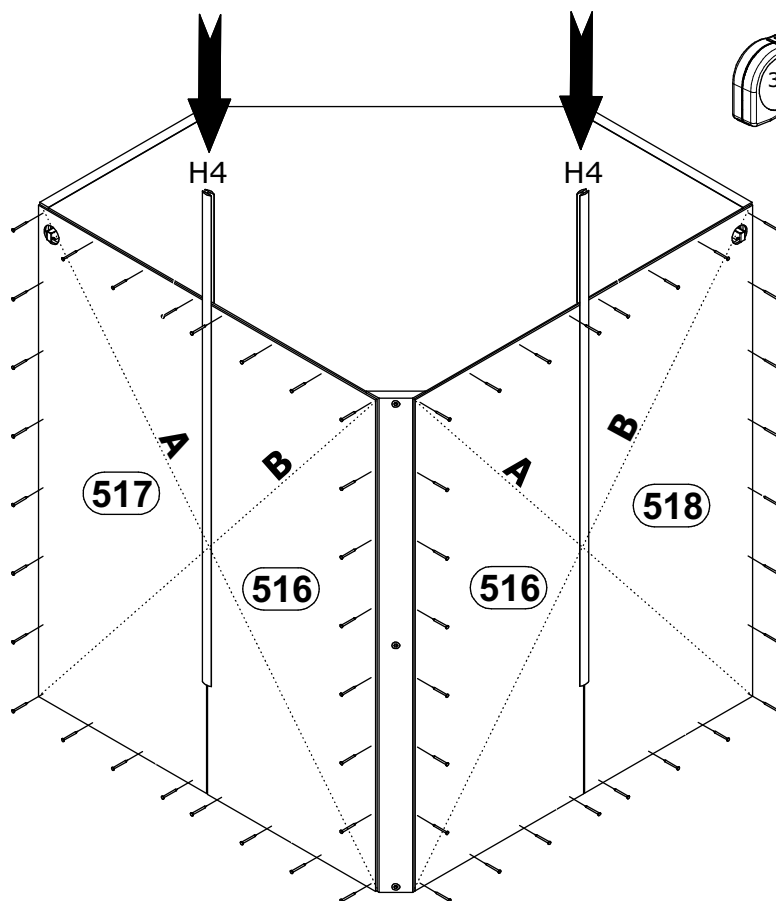
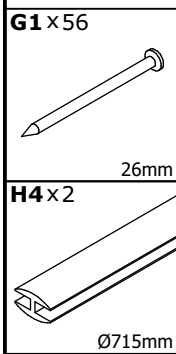


G1







**6**

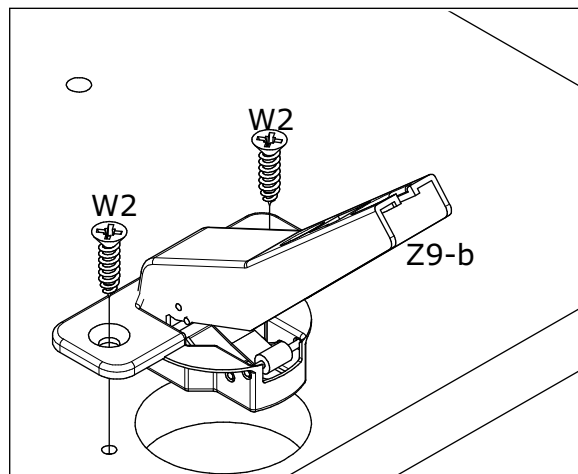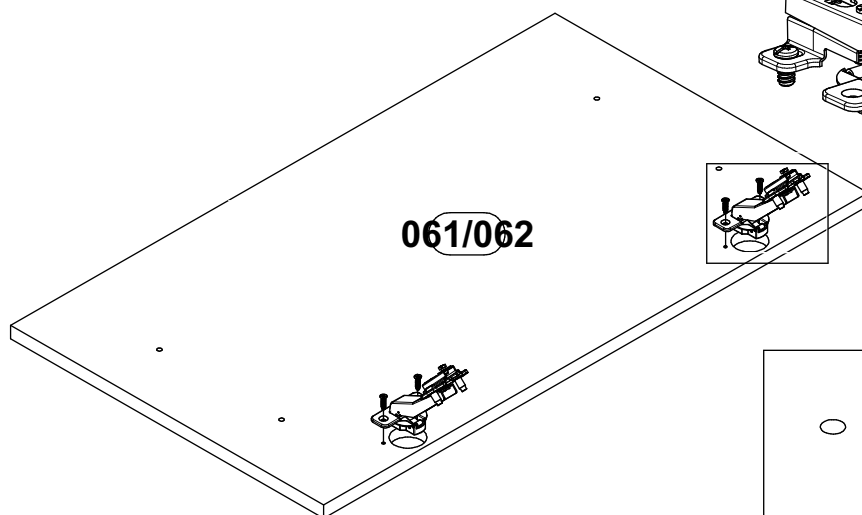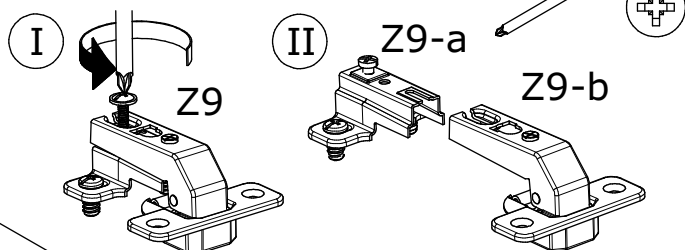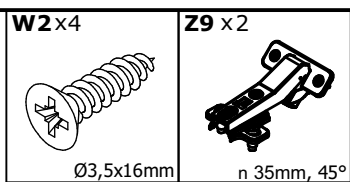

7

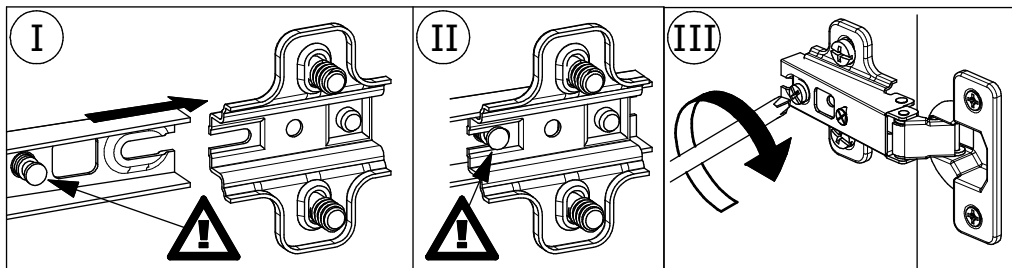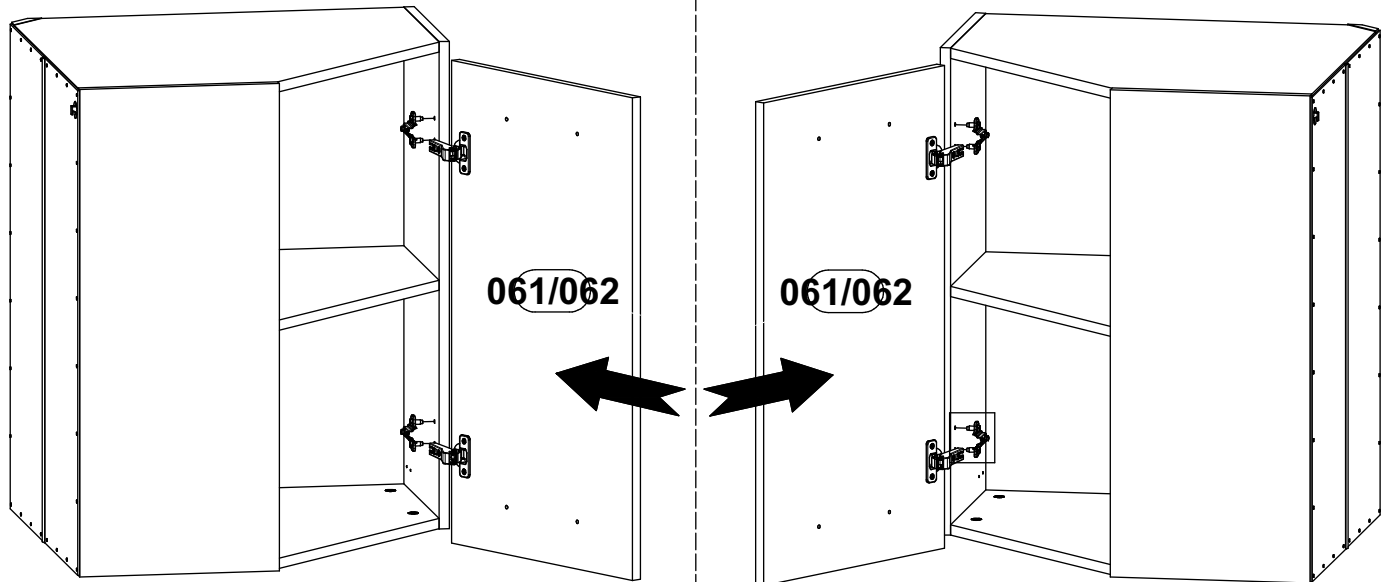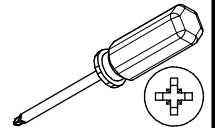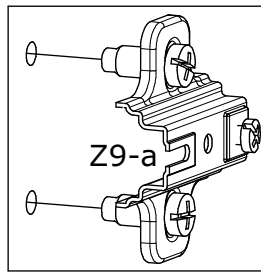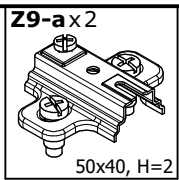


8

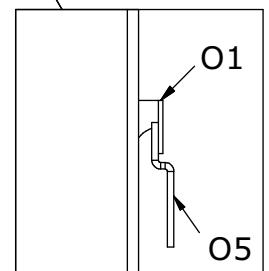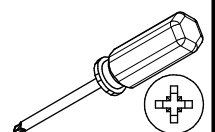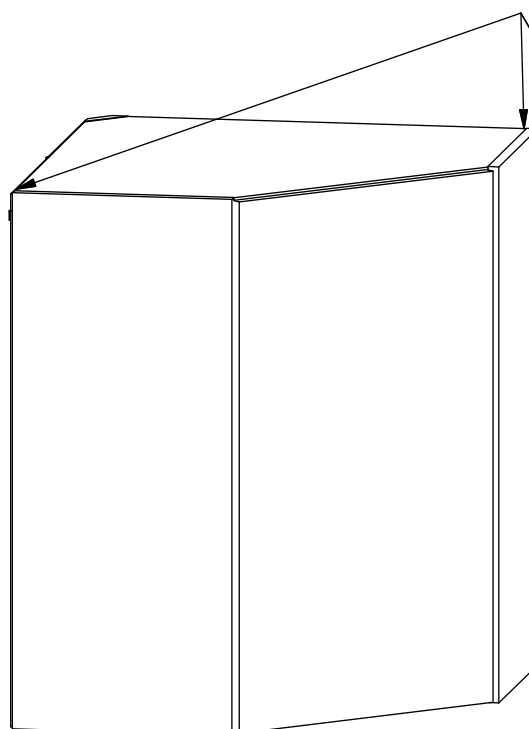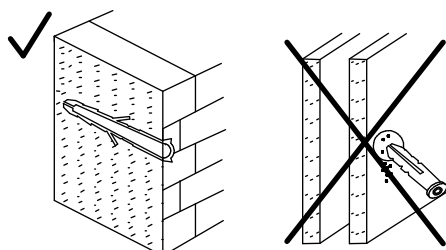
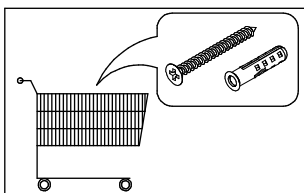
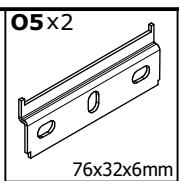


9













J10×12



Ø21mm

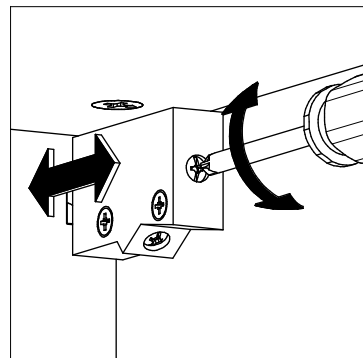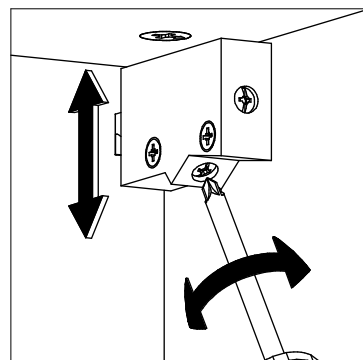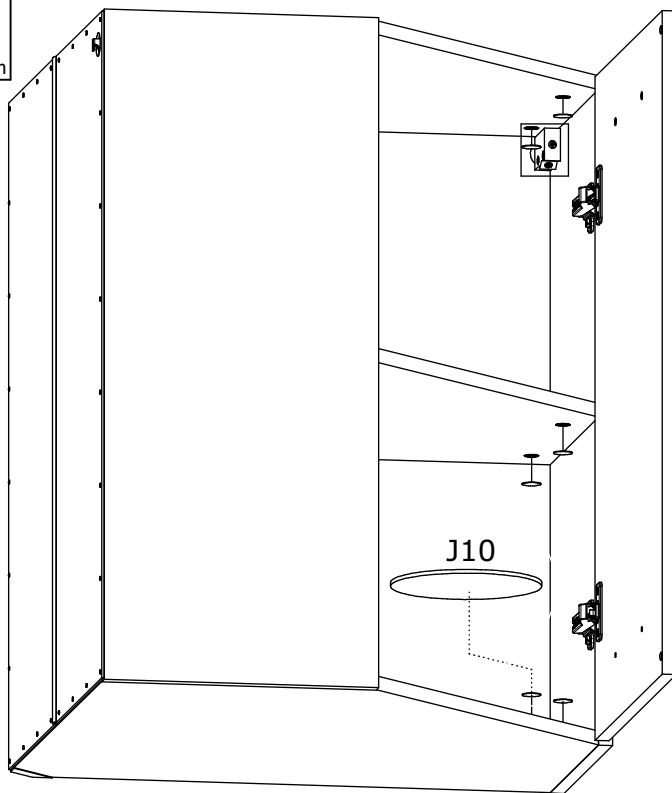

10

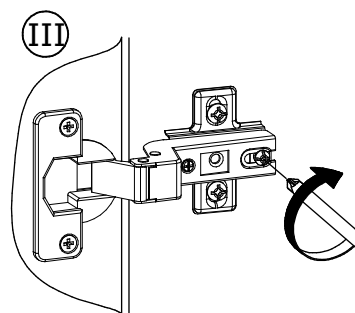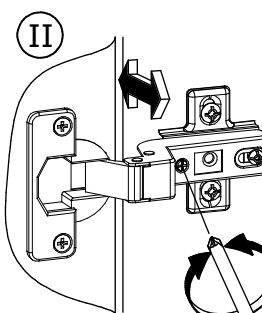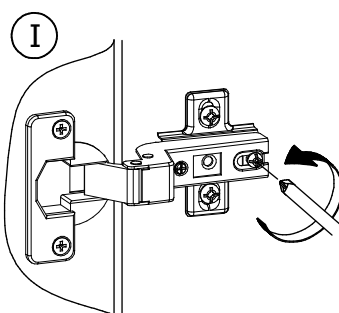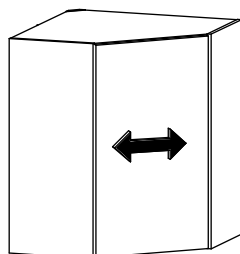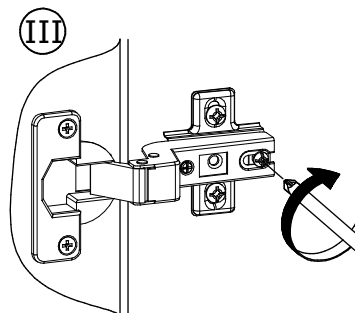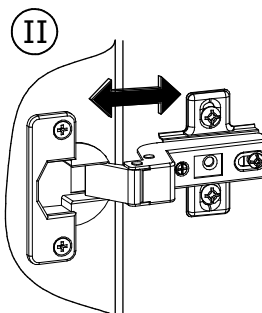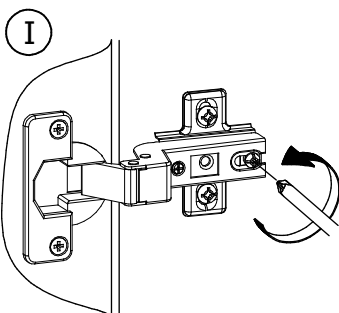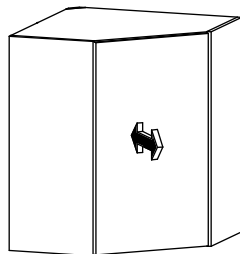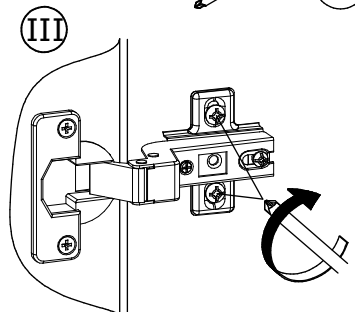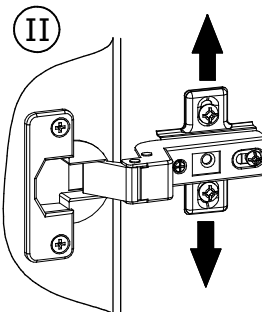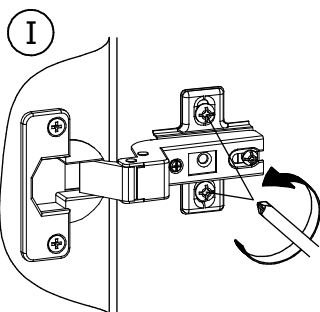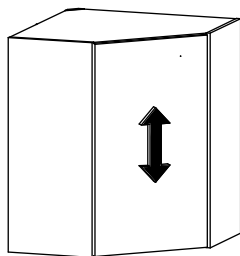




# ?

## A

## B


### A

I20x




83x21x11mm


W2x




Ø3,5x16mm

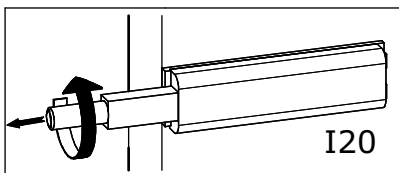


I20








I20



I20-a




I20-b

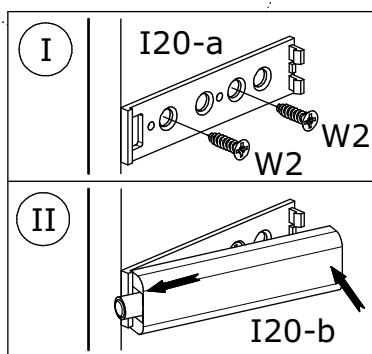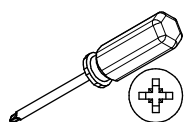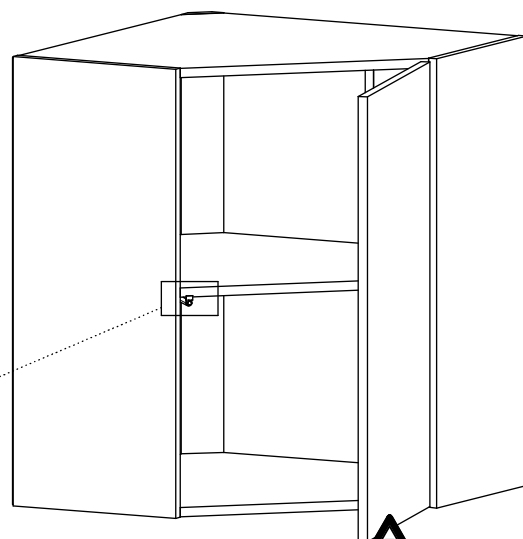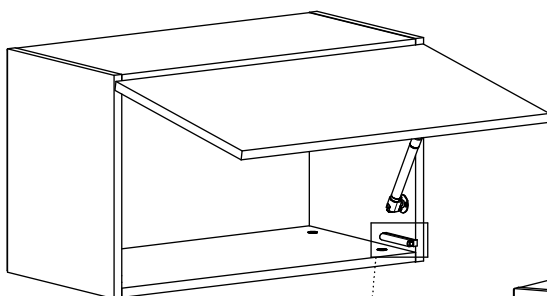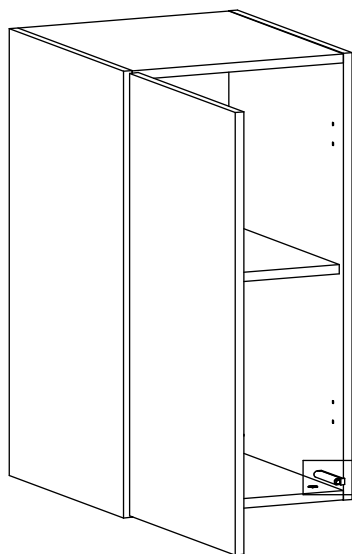


I

I20-a


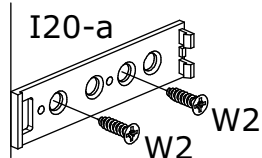


W2

II

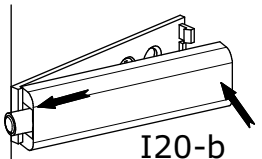


I20-b

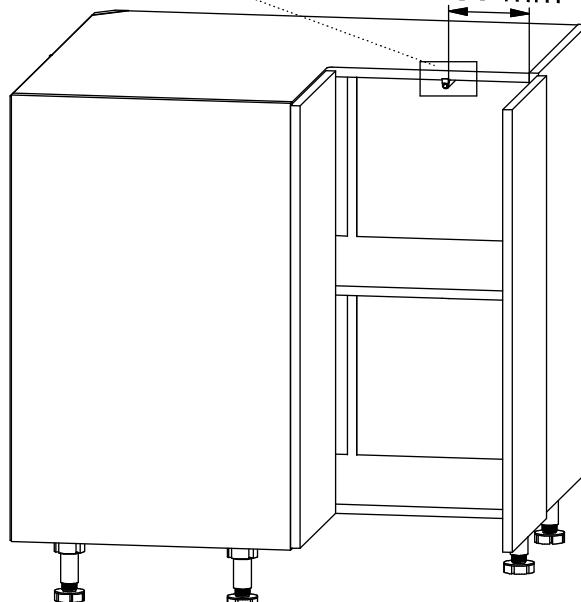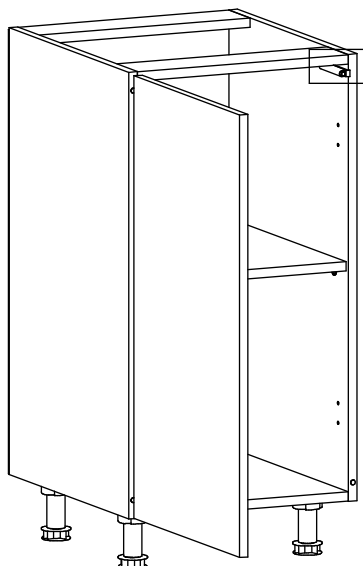

130 mm


**B**

U18 / U19



200 / 300mm

W5



Ø4x30mm

Y1



Ø8x1,5mm

